Thermostat



80 Hartford Avenue, Mount Vernon, NY 10553 Tel: 877-ICE-AIR-1 (877-423-2471) Main: 914-668-4700 Fax: 914-668-5643 email: sales@ice-air.com

email: sales@ice-air.com

Manual Temperature and Mode Dial Thermostat

Ice Air's Manual Temperature and Fan Speed Dial Thermostats for Fan Coil Units offer basic control functions with an easy-to-use interface.

Standard Functions:

- Temperature Adjustments: Warmer to Colder dial
- Mode options:
 - 4-mode: Off, Heat, Lo-Cool, Hi-Cool
 - 6-mode: Off, Exhaust, Vent, Heat, Lo-Cool, Hi-Cool
 - Vent mode: Outside air damper open, evaporator fan on, condenser fan off, compressor off.
 - Exhaust mode: Outside air damper open, condenser fan on, evaporate fan off, compressor off





Electrical Specifications	
Power supply	Line voltage
Control signal output	Line voltage
Temperature Ranges	
Measurement range	32°F - 99°F
Control range	60°F - 90°F
Operating range	32°F - 122°F
Physical Data	
Plate dimensions	4-5/8" H × 5-5/8" W
Knob dimensions	1-1/8" diameter
Adjustments	Manual dials